

How to change the language on X1

The XFINITY system's language default is English but can be changed to Spanish at any time.

1. Press the **xfinity** button on your remote control.
2. Select the **gear icon** on the main XFINITY navigation bar.
3. Select **Language > Menu Language**. The available language options will appear.
4. Select **Español**, and a confirmation request will appear. The main menu will reset to Spanish after a few seconds.
5. To set the menu back to English, repeat the same steps and select **English**.



How to access Kids Zone

There are 3 ways to access Kids Zone: Press the **Microphone**  on your remote and say "**Kids Zone**"; use the keypad to type in **Kids Zone**; or follow the steps below:

1. Navigate to the On Demand menu and press **OK** on your remote.
2. Highlight the **Kids** tab and press **OK**.
3. Highlight the **Kids Zone** tile and press **OK**.

To leave Kids Zone, highlight **Exit** on the top-left corner of your screen and press **OK**.



Kids Zone settings

To access and change your preferences, go to the **Kids Zone settings** menu (the **gear icon** at the top left of the **Kids Zone** guide). Use the **Up Arrow** or **Down Arrow** button on your remote to highlight the settings you'd like to activate or deactivate. Then press **OK**.

From this menu you can:

1. Restrict content by age range.
2. Turn off recordings so kids don't clutter the DVR.
3. Allow episodes to play back to back with auto-play or disable to limit how much your kids watch.
4. View Common Sense Media ratings and reviews.

For more information on Kids Zone, visit xfinity.com/Help and search **Kids Zone**.