

# Your digital adapter on-screen guide.

See how to navigate TV listings, set parental controls and more!

## Finding your favorite shows is now easier.

Great news — TVs connected to digital adapters now have an on-screen guide with helpful features like TV listings and parental controls. This quick reference guide will show you how to access the features and set them up.



## Using Your HD Remote Control

**All Power / Power:** Turns on/off your TV.

**VOL + / - :** Turns the volume up and down on the DTA. After your remote is programmed to the TV, these keys operate the TV's volume control.

**CH ^/V :** Selects next higher or lower channel.

**Mute:** Turns the sound on and off.

**XFINITY/Menu:** Enters the on-screen guide menu.

**Guide:** Shortcut to TV Listings

**OK:** Selects the highlighted item within the guide

**Last:** Returns you the previous channel or guide screen and exits guide screens.



**Info:** Provides a description of a program.

**Exit:** Exits guide screens and returns you to TV viewing.

**D key:** Shortcut to audio settings and Descriptive Video Services (DVS)

**Note:** Some features above require an on-screen programming guide not available with all devices.

**Keypad (0-9):** Select the channel you want to view (e.g., 0-9 or 0-2-6)

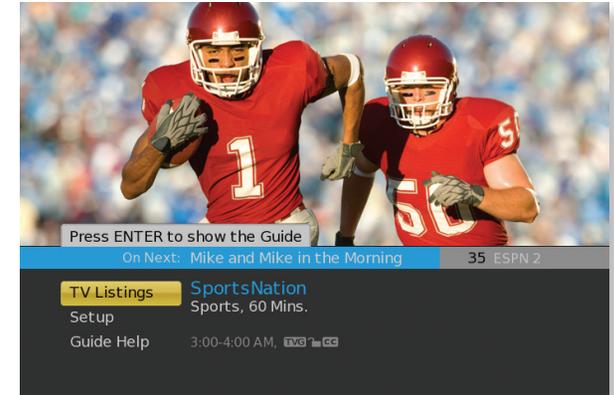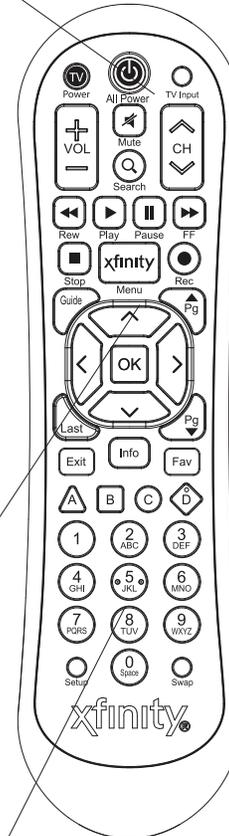

## Using your on-screen guide

Just press the **INFO** button on your remote to view the **SmartBar**. This will display your on-screen guide features, including **TV Listings**, **Setup** and more.

You can navigate using the following keys:

⬆ and ⬇ = Navigate up and down

⬅ and ➡ = Navigate left and right

Ⓞ = Confirm your selection

**Tip:** Choose **Setup** to change the location and display time of the **SmartBar**.

### On-Screen Guide Tip

With **Watch in HD** you will always be one step away from an HD channel. Simply look for the **Watch in HD** button on the **SmartBar** and press OK.



### TV Listings

This allows you to see what TV programs are currently on, and what will be on later.

1. Press the **Guide** button on your remote control.
2. To navigate the listings, press the arrow keys on your remote:
  - and = Navigate up and down
  - and = Navigate left and right
  - Pg Up or Pg Dn (use remote keys)
3. Press to make your selection.

### Setup


Adjust your on-screen guide options, including audio, text languages and more.

1. Press the **Xfinity** button on your remote control.
2. Navigate using the , , and keys to choose from these options:
  - Here you have the option to turn on or off the **SmartBar in Guide Setup**
  - Choose the preferred audio language when available
  - Change the language of your on-screen guide
  - Set up **Parental Control** options
3. Press to make your selection.

### Program Information

You can view program details or quickly set **Parental Controls**.

1. With a TV program highlighted in the guide, press .
2. Select **Watch** to view the program, or **Lock** to block the program or channel from being viewed.

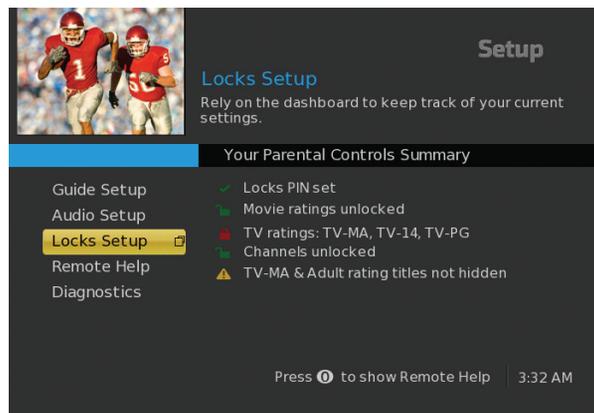

### Parental Controls

Use these to manage access to certain types of content on TV. You can block channels, lock shows by rating and hide program titles.

1. Press the **Xfinity** button on your remote control, choose **Setup**, then **Locks Setup**.
2. Navigate using the , , and keys to choose from the listed options (see box below).
3. Press to make your selection.

If you're setting locks for the first time, you'll be prompted to create a Personal Identification Number (PIN). A lock icon will then appear next to the ratings you have locked, as well as ratings that are more restrictive.

For more information, visit [comcast.com/parentalcontrols](http://comcast.com/parentalcontrols) or call 1-866-781-1888.

**Tip:** While viewing **TV Listings**, you can block a specific channel by highlighting the program you wish to block. Then press **Info** and select **Lock**.

#### Parental Control Options

**PIN Manager** — Manage your PIN and restrict viewing of programs.

**Master Locks** — Remove all locks or temporarily deactivate locks.

**Movie Rating Locks** — Restrict access to TV and movies with specific ratings.

**TV Rating Locks** — Restrict access to shows with specific TV ratings.

**Channel Locks** — Block access to specific channels within TV listings.

**Hide Titles** — Replace titles of mature programs on the on-screen guide with **Adult Programming** or **TV-MA Programming**.

## Frequently Asked Questions

### What if the remote control doesn't work?

- Try replacing the batteries.
- Make sure the front of the digital adapter isn't blocked, so the remote can connect with it.
- If you're having an issue with a specific button, that button may be inactive and reserved for future use.

### Is my digital adapter remote control a universal remote?

When programmed, your remote will control both your TV and your digital adapter. It will not control DVD players, VCRs or other equipment.

### Why do I see "To be announced" in TV listings instead of program titles?

If your digital adapter loses power, there's nothing you need to do. Data will reload automatically once power is restored.

### How do I control what my child watches?

**Parental Controls** lets you restrict certain material on your TV. For more info, see **Parental Controls** in this guide.

### What if I forget my Parental Control PINs?

Call Comcast Customer Service at 1-800-COMCAST to reset them. After they're reset, you'll be able to enter your new code.

### Why is this guide different from other guides in my home?

This guide is a simple viewing experience to allow basic on-screen guide viewing features for TVs connected to digital adapters.

**For more information, visit  
[comcast.com/adapterguide](http://comcast.com/adapterguide)**